


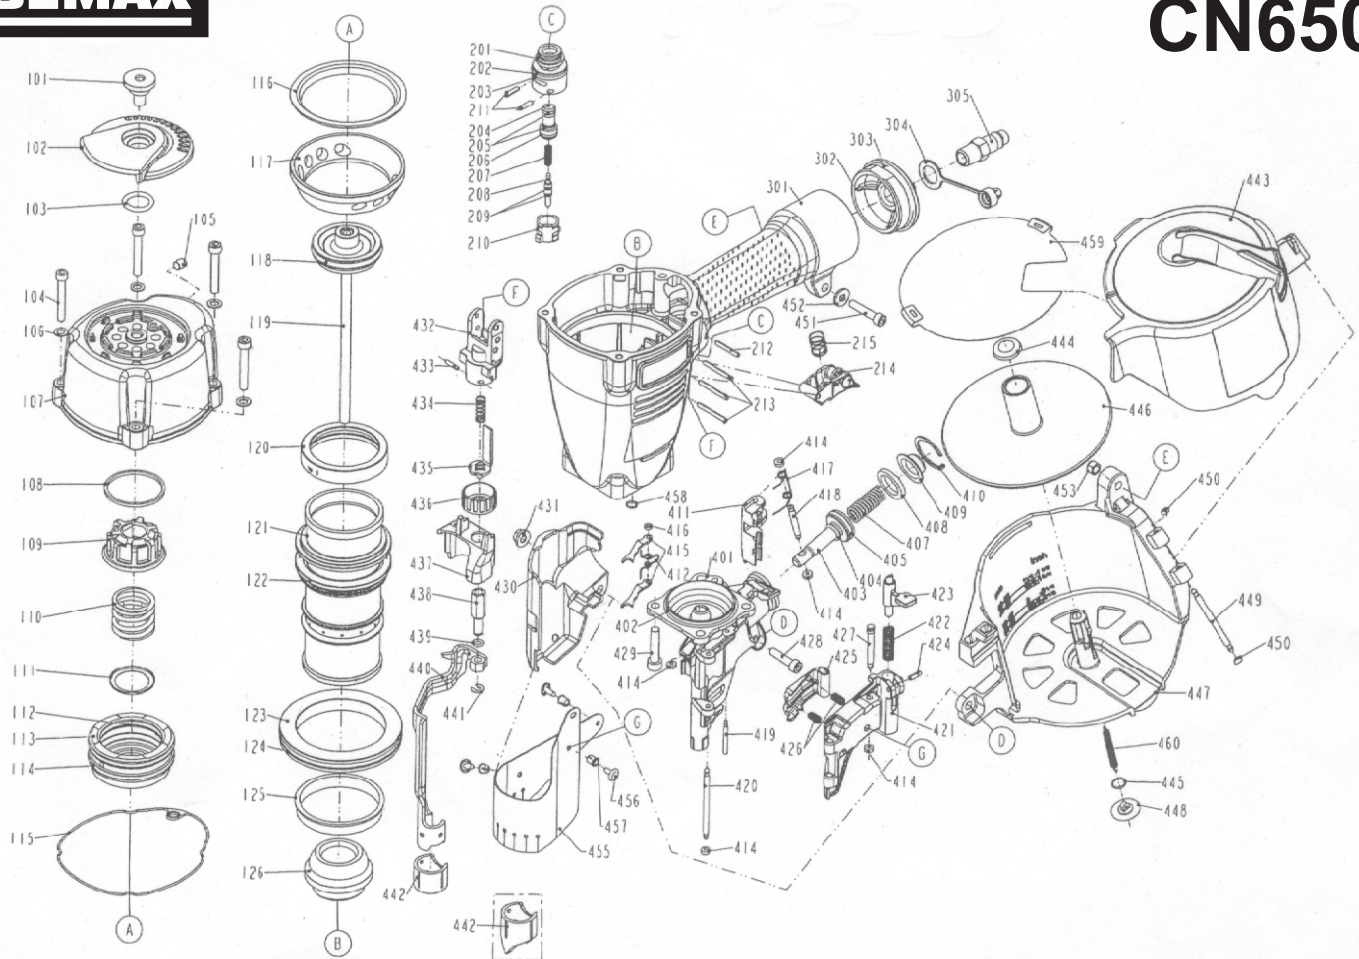

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
101	1136B-0374702-1	DEFLECTOR PAD	211	2040400-05060-0	SPRING PIN	428	2040101-03100-0	HEX.SOC.HD.BOLT
102	11371-0374704-1	DEFLECTOR	212	2040400-05110-0	SPRING PIN	429	2040101-04090-2	HEX.SOC.HD.BOLT
103	2041106-C2010-0	O - RING	213	2040400-05160-0	SPRING PIN	430	1134C-0764703-1	SAFETY COVER
104	2040100-C3220-0	BOLT W/FLAT WASHER	214	11224-0764701-1	TRIGGER UNIT	431	2040501-03040-0	BOLT CAP
105	2040104-C3010-0	HEX.SOC.HD.SCREW	215	11376-0370001-1	SPRING	432	11338-0764701-1	SAFETY GUIDE
106	11369-0984301-1	CAP	301	11230-1096601-1	GUN BODY UNIT	433	2040400-04050-0	SPRING PIN
107	11381-0950001-1	WASHER SEAL	302	11346-0081302-1	END CAP	434	11337-0084701-1	SAFETY SPRING
108	11370-0950001-1	SEAL	303	2041109-05050-0	O - RING	435	11332-0794705-1	SAFETY B
109	11360-1010001-1	COMPRESSION SPRING	304	1132L-0010001-1	AIR PLUG CAP	436	11393-0761101-1	ADJUST AXIE
110	11381-0950002-1	WASHER	305	1135V-0000007-1	AIR PLUG	437	1137A-0764701-1	COVER-SAFETY
111	2041108-05070-0	O - RING	401	11382-1014703-2	NOSE PIECE	438	11393-0764701-1	ADJUST ROD
112	11368-1010001-1	HD.VALVE PISTON	402	2041104-05020-0	O - RING	439	2041102-01050-0	O - RING
113	2041104-05050-0	O - RING	403	11364-0764702-1	FEED PISTON	440	11331-0764703-1	SAFETY A
114	1132M-1054701-1	PACKING	404	2041109-01050-0	O - RING	441	2040302-24010-0	E - RING
115	1136D-0984701-1	PRESS RING	405	2041100-02040-0	O - RING	442	11339-0764702-1	PROTECTIVE CASING
116	1131E-0084701-2	CYLINDER PRESS RING	407	1138J-1054701-1	PUSHER SPRING	442	11339-0764703-1	PROTECTIVE CASING
117	2041100-05062-0	O - RING	408	1134W-0810001-1	FEED BUMPER	443	11355-0760001-1	MAGAZINE COVER
118	11204-1050001-1	DRIVER UNIT	409	11366-0814701-1	FEED PISTON CAP	444	1134N-0250002-1	SPRING BASE A
119	11399-1014701-1	COLLAR	410	2040300-01010-0	C - RING	445	2041109-01030-0	O - RING
120	11320-1050001-1	CYLINDER	411	11306-1014703-1	FEED FINGER	446	11356-0784702-1	SPACER
121	2041109-06020-0	O - RING	412	1130H-1000001-1	SPRING	447	11384-0764702-2	MAGAZINE CASE
122	11321-0080006-1	CYLINDER SPACER	414	1135H-0790001-1	PU RETAINER	448	1134M-0250002-1	SPRING BASE
123	2041104-08010-0	O - RING	415	1130G-0764701-1	FIRST STOPPER FINGER	449	11362-0784702-1	DOOR SHAFT PIN
124	11322-0764701-1	CYLINDER RING	416	1131D-0460001-1	URETHANE RETAINER	450	1135H-0250001-1	SHAFT RING
125	11327-0764702-1	BUMPER	417	11307-0780001-1	FEED FINGER SPRING	451	2040101-03161-0	HEX.SOC.HD.BOLT
201	2041104-02020-0	O - RING	418	11365-0664701-1	PIN FEED PISTON	452	2040202-03010-0	FLAT WASHER
202	2041104-02030-0	O - RING	419	11359-1004701-1	PIN-NAIL STOP	453	2040500-03020-1	LOCK NUT
203	11374-0084701-1	PLUNGER CAP	420	11362-0764702-1	DOOR SHAFT PIN	455	11383-0760002-1	MUZZLE PROTECTOR
204	1133S-0250001-1	VALVE PLUNGER	421	11361-0764702-2	DOOR	456	11324-0254701-1	FIXED PIN
205	2041100-01070-0	O - RING	422	11311-0794701-1	LATCH SPRING	457	1131G-0254701-1	FIXED RING
206	2041100-01030-0	O - RING	423	11310-0794701-1	DOOR LATCH	458	2041109-01060-0	O - RING
207	11376-0254701-1	SPRING	424	2040400-05050-0	SPRING PIN	459	1137E-0760001-1	FIX-PLATE
208	11375-0084701-1	PLUNGER	425	11358-0764703-1	NAIL STOP	460	11328-0764701-2	PULL SPRING
209	2041102-01030-0	O - RING	426	1133C-0784701-1	STOPPER FINGER SPRING			
210	11373-0084701-1	TRIGGER VALVE HEAD	427	11359-0764702-1	PIN-NAIL STOP			